



M-POWER-1TT-BEZEL

BEZEL INSTALL GUIDE



CUT HOLE IN TOP

- 1 Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled “TOP TEMPLATE”.




CUT HOLE IN BOTTOM

- 2 Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled “BOTTOM TEMPLATE”.



INSTALL OUTLET

- 3 Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.

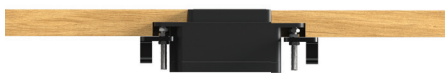

SECURE SCREWS

- 4 Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.




M-POWER-1TT-BEZEL

BEZEL INSTALL GUIDE

TOP

TEMPLATE

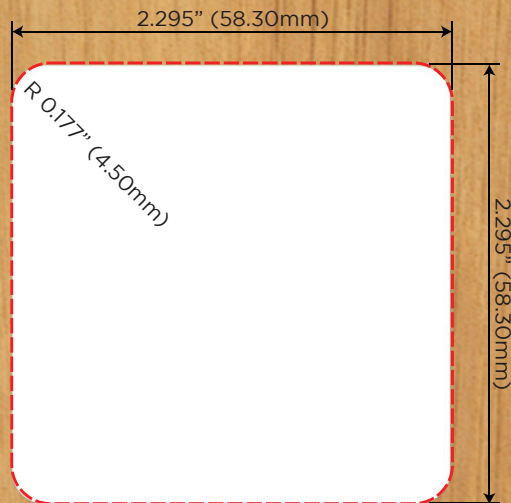




M-POWER-1TT-BEZEL

BEZEL INSTALL GUIDE

BOTTOM
TEMPLATE →

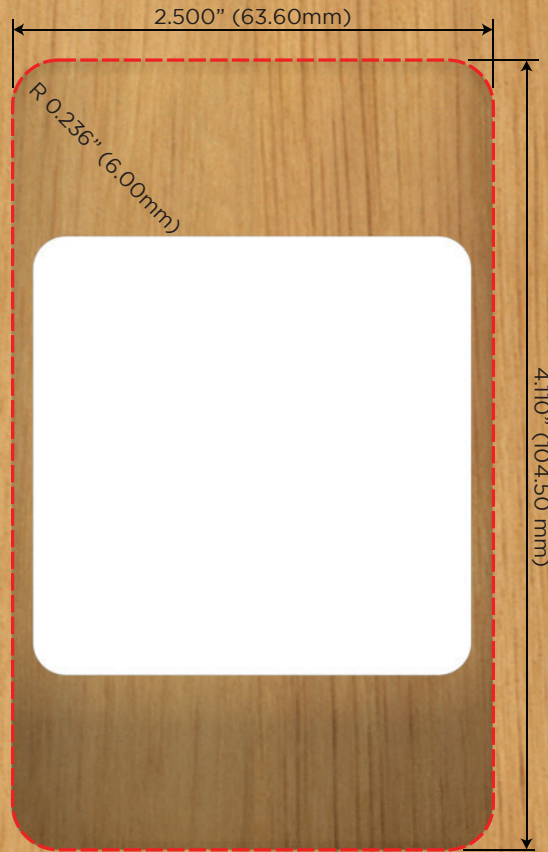



M-POWER-1TT-BEZEL

BEZEL INSTALL GUIDE

