



# M-POWER-2TT-TRIM PLATE

## ABOVE SURFACE TRIM PLATE INSTALL GUIDE

---



**CUT HOLE IN WOOD**

- 1 Rout/cut bottom of wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".




**INSTALL OUTLET**

- 2 Insert outlet from top, and slip mounting brackets as shown over threaded studs. Screw the four nuts (8-32) onto each of the four studs below the mounting brackets and tighten, locking the outlet in place.



# M-POWER-2TT-TRIM PLATE

## ABOVE SURFACE TRIM PLATE INSTALL GUIDE

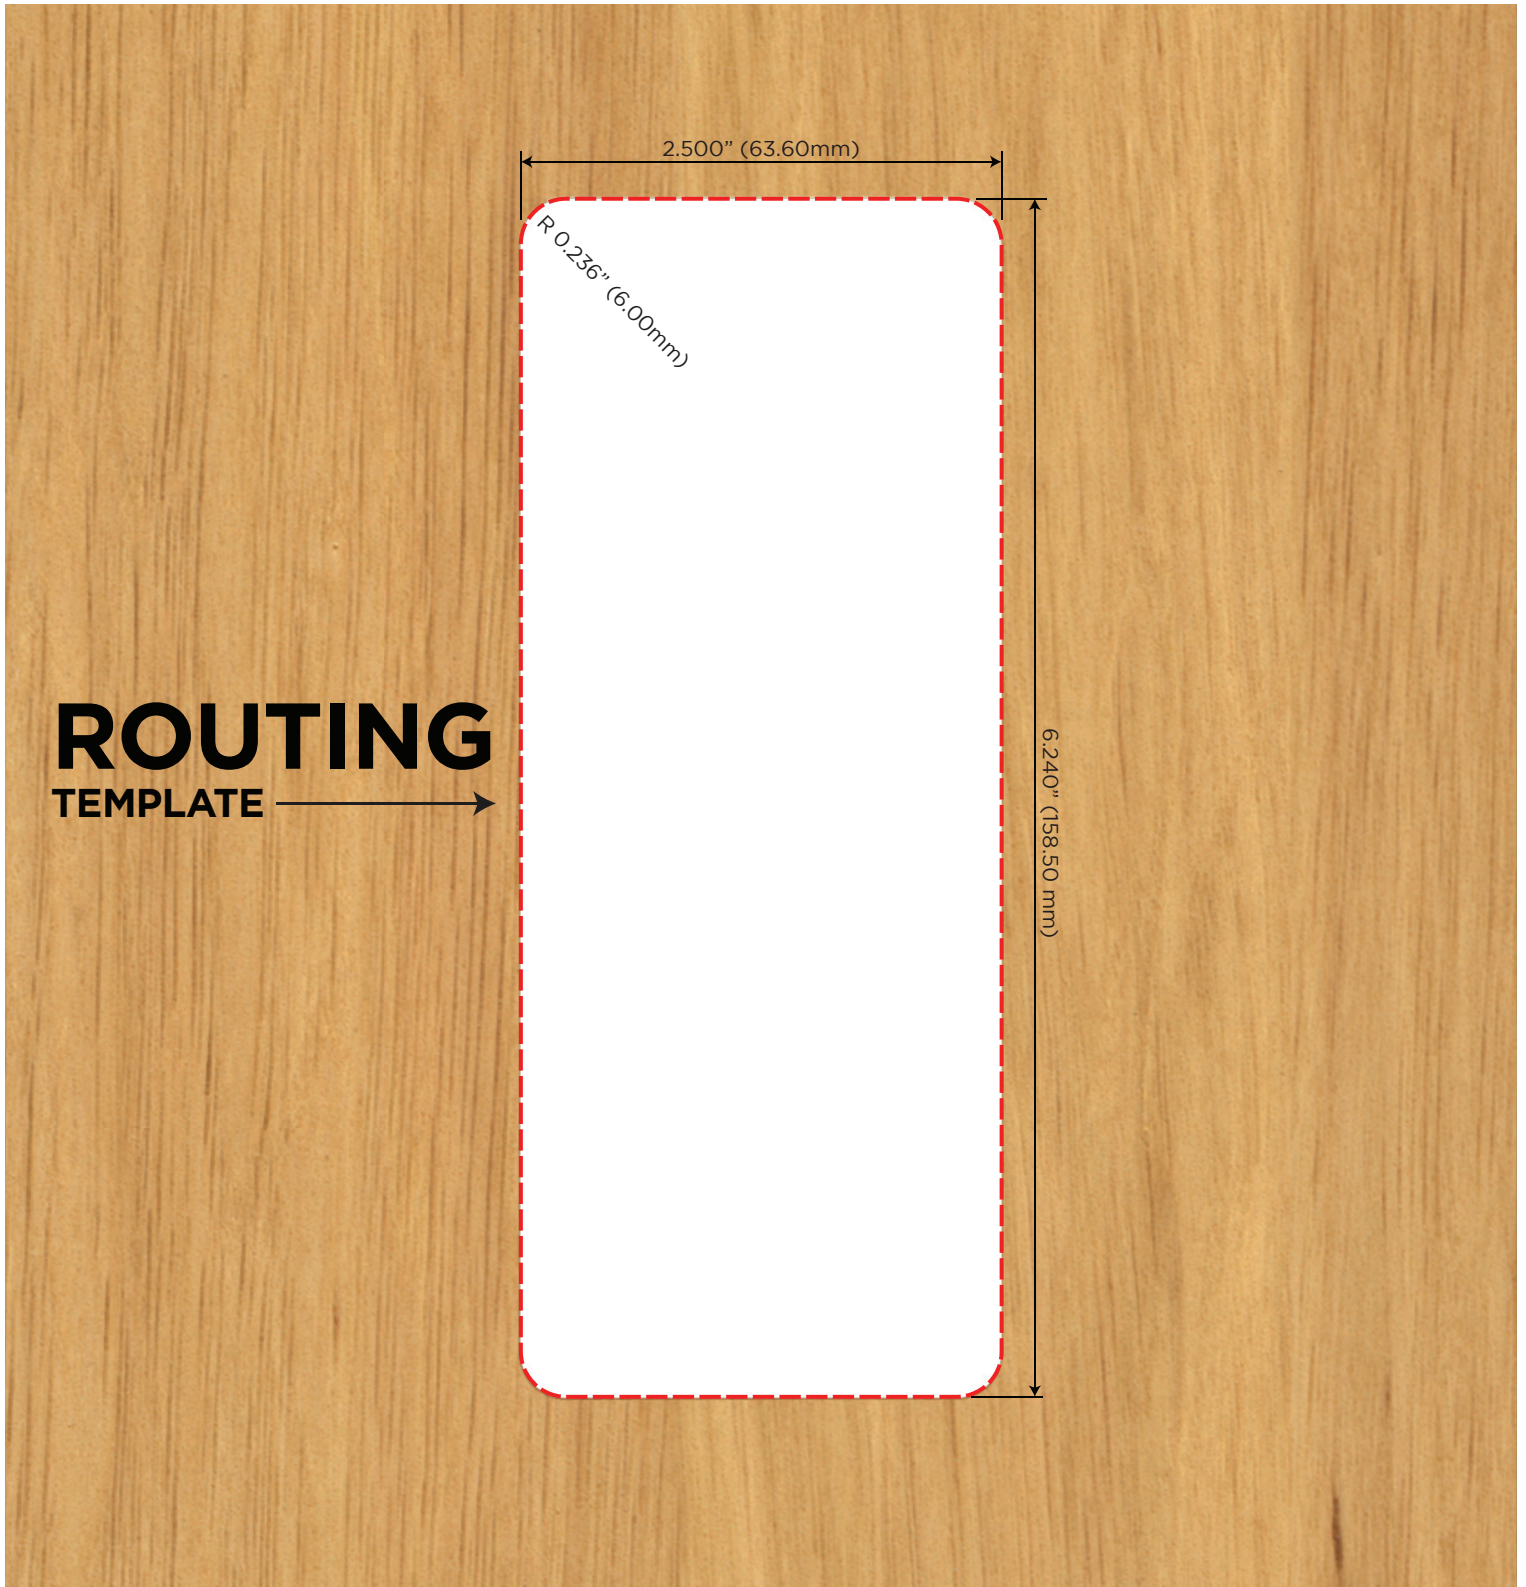



# M-POWER-2TT-TRIM PLATE

## ABOVE SURFACE TRIM PLATE INSTALL GUIDE

