



M-POWER-3TT-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE



CUT HOLE IN WOOD

- 1 Rout/cut bottom of wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".




INSTALL OUTLET

- 2 Insert outlet from top, and slip mounting brackets as shown over threaded studs. Screw the four nuts (8-32) onto each of the four studs below the mounting brackets and tighten, locking the outlet in place.



M-POWER-3TT-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE

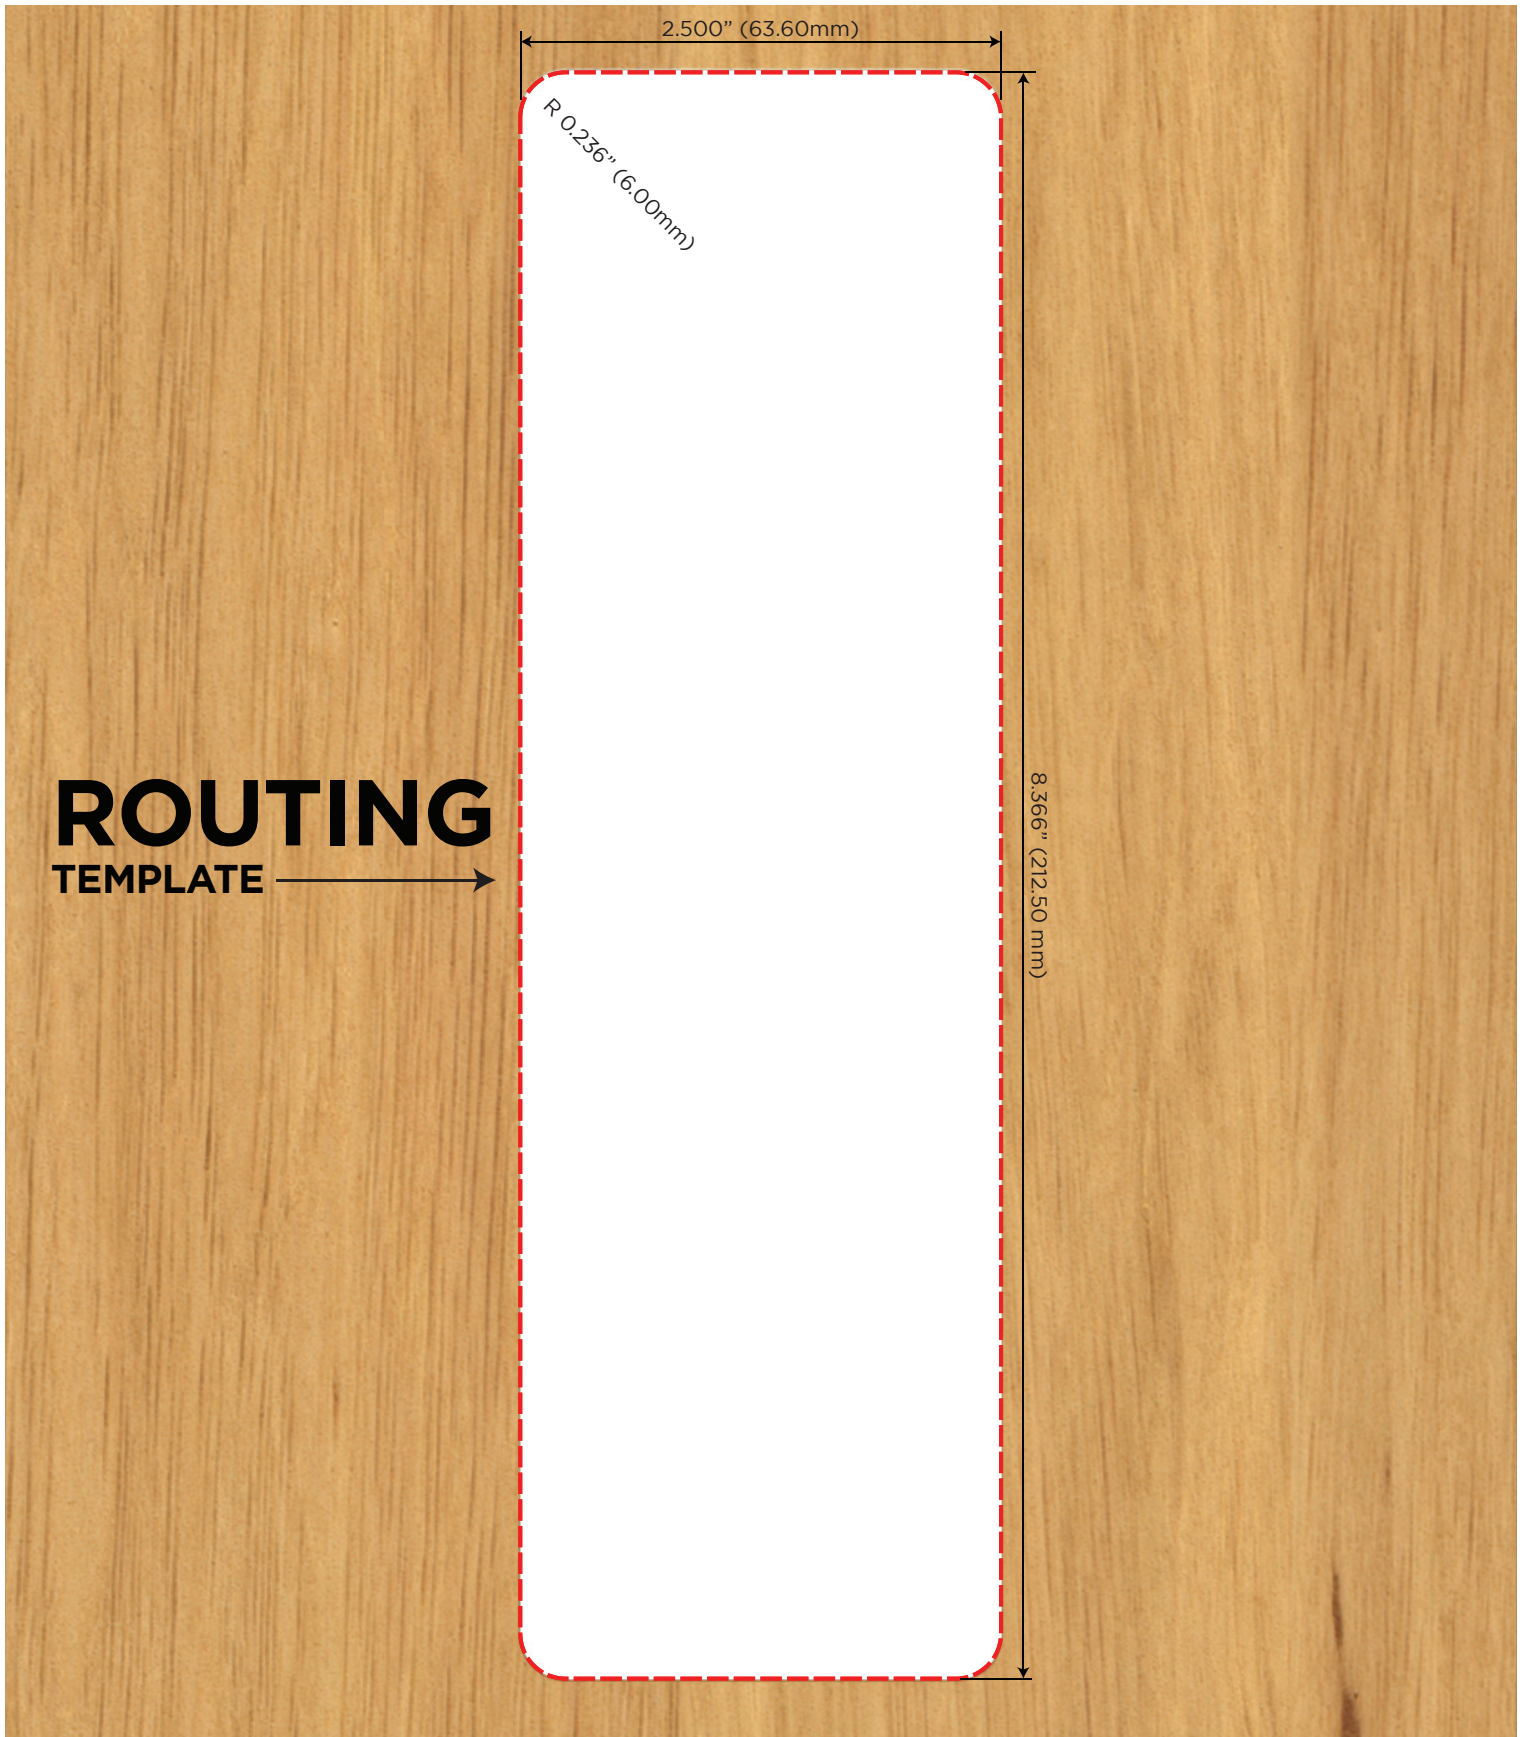

ROUTING
TEMPLATE →



M-POWER-3TT-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE

